




plumbers

Risk controls for loading/ unloading work vehicle

Before applying a new risk control, review its use to ensure it does not introduce new risks during the tasks.

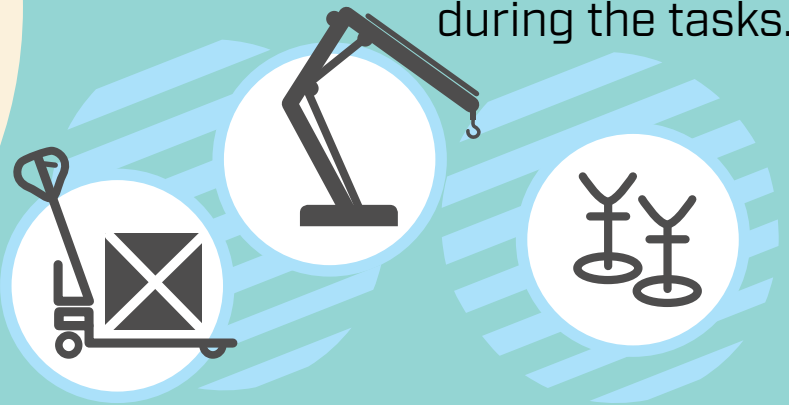

- Use mechanical assistance e.g. Hiab crane.
- Mechanically lowered/lifted tail gate.
- Ladder rollers on roof rack.
- Ramps.
- Removable tailgate and sides.
- Use light weight tools and equipment where possible.
- Use manual handling aids.
- Use best layout for equipment and tools.
- Use team handling.
- Use PPE.

